 


HumminGuru LUMI Record Stabilizer

with Built-in Ambient Light and Turntable Speed Test

Owner's Manual

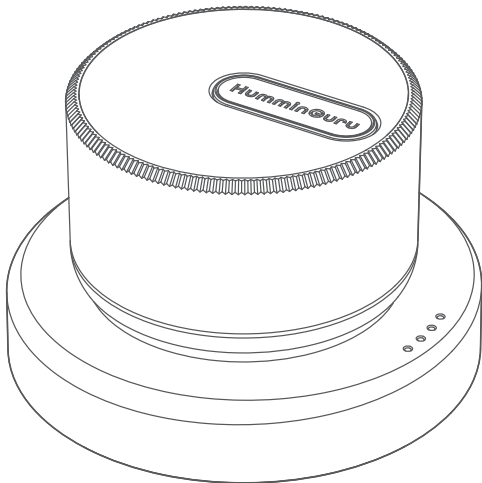

Model: HC09

Thank you for purchasing the HumminGuru LUMI Record Stabilizer. To use this product safely and effectively, please read the manual thoroughly and ensure a clear understanding before operation. After reading, please keep the manual accessible for future reference.



HumminGuru

Safety Precautions

Important! Read all instructions carefully before use and keep it for future reference.

This page mainly refers to safety precautions to prevent property damage and danger to users and others. After understanding the indication and the symbols clearly, please read thoroughly and follow the instructions strictly.

Symbol Explanation



Indicating “when the product is used wrongly, it may cause severe injuries^{*1} and death.”



Indicating “when the product is used wrongly, the user may get injured^{*2} or the product may cause property damage^{*3}”.

*1: Severe injuries mean to get an electric shock, short circuit, and ignition.

*2: Getting injured mean you get wound and electric shock.

*3: Property damages means the damage to accommodations, properties, turntables, and other items.



Prohibited



Disassemble
is prohibited



Soaking is
prohibited



Wet hand is
prohibited



Mandatory



Indicates prohibition (must not do). The details of the prohibition will be instructed by sentences or illustration nearby or in the symbol.



Indicates mandatory (must do). The details of the mandatory will be instructed by sentences or illustration nearby or in the symbol.



Caution: Charging



- DO NOT charge the product with a voltage that exceeds the rated specification.
- Avoid charging the product on the surface of flammable objects.
- DO NOT touch or use the product with wet hands.
- In case the product fails to charge, try using another charging cable.
- If abnormal heat or deformation occurs during charging, immediately stop the charging process.
- If the product will not be used for an extended period, turn off the power and charge it once every three months.

Warning: The Device

This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the equipment a safe way and understand the hazards involved. Children shall not play with the device.




- DO NOT disassemble, fix, repair, or modify the device in any way without the authorization of the manufacturer.



- DO NOT expose the device to water or immerse the device in water.
- DO NOT drop the device.


Overview

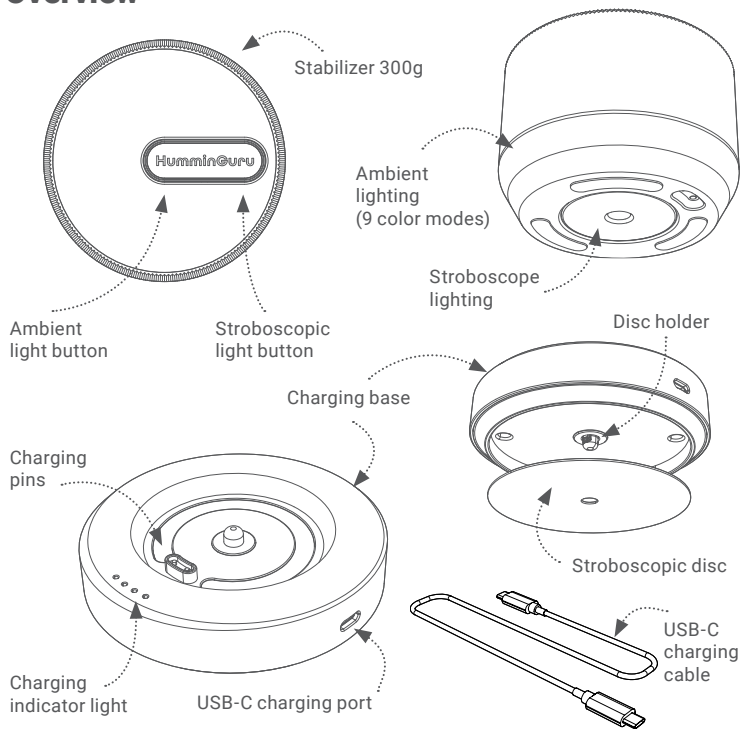

Device Setup


Step 1

Install the stroboscopic disc at the bottom of the charging base until it clicks into place.

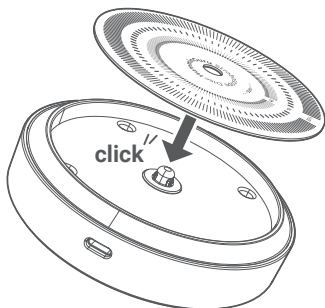


Step 2

Place the stabilizer on top of the charging base, aligning it with the charging pins.

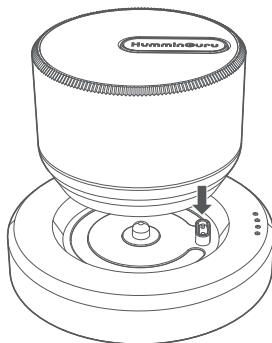

Charging the Device

To charge the device, begin by plugging one end of the provided USB-C cable into the charging port and the other end into a power outlet. During charging, the light will flash. Once the device reaches full charge, all four indicator lights will light up.

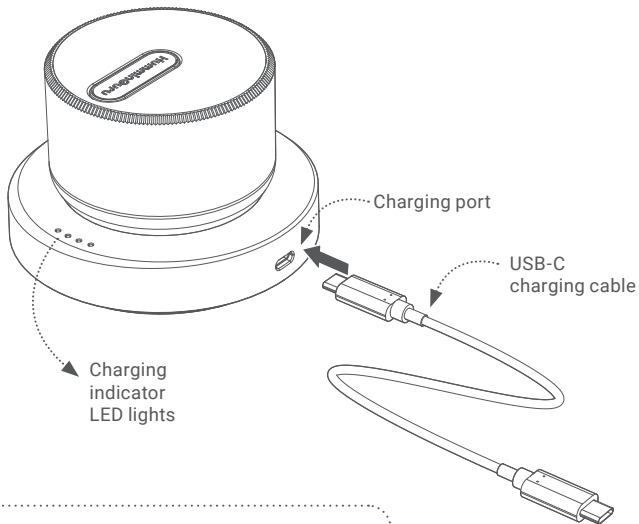


Notice: When the charging base is connected to power, all four indicator lights will remain illuminated without the stabilizer in place.

Use as a Stabilizer

The stabilizer weighs only 300g and is designed to work with a variety of turntables, but does not support 7" records that use a 7" spindle adapter.


Step 1

Take out the stabilizer from the charging base.

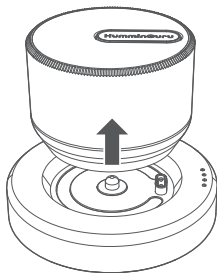

Step 2

Position the stabilizer on the record, inserting it through the turntable spindle. The stabilizer is compatible only with records that have a $\frac{1}{4}$ " / 7mm center hole.

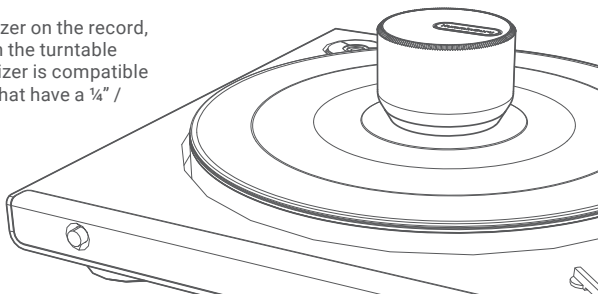

Ambient Lighting

The ambient lighting can be used on or off the turntable as mood lighting, with 9 color options to enhance listening environments and user comfort.

Turn On:


Press the left-side button on the stabilizer to turn on the ambient lighting.

Change Color Mode:

Press the button again to switch the color mode. There are a total of 9 modes: 8 solid colors (red, orange, yellow, green, teal, blue, purple, fuchsia) and 1 RGB color-changing gradient.

Turn Off:

Long-press the button to turn off the light.

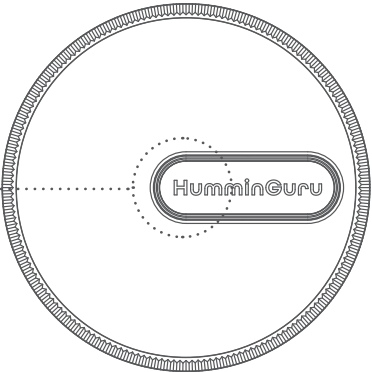


Notice: The ambient lighting will automatically turn off after one hour of use.

Turntable Speed Test

The product includes an additional feature that allows the user to verify a turntable's rotation speed. It can be tested at $33\frac{1}{3}$, 45, and 78 RPM (using a 50Hz stroboscopic disc). To perform the test, the HumminGuru stabilizer and the stroboscopic disc are needed. Please check the turntable to confirm if it can be adjusted by the user.


Step 1

Remove the stroboscopic disc from the bottom of the charging base by pressing the middle button.

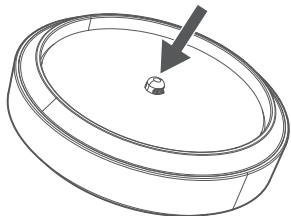


Step 2

Place the stroboscopic disc on the turntable platter.

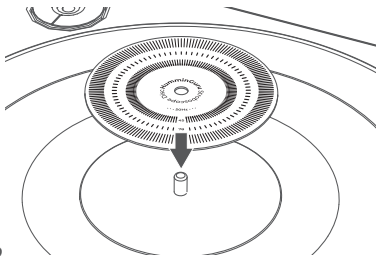


Step 3

Turn on the turntable and start spinning at the desired speed.

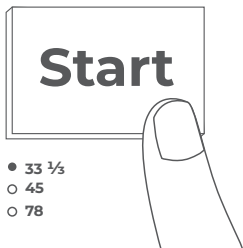


Step 4

Press the right-side button on the stabilizer to turn on the stroboscopic lighting.

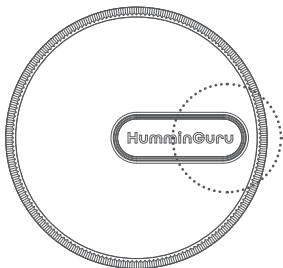

Step 5


Hold the stroboscope light above the spinning disc, approximately 10 cm away from the surface.

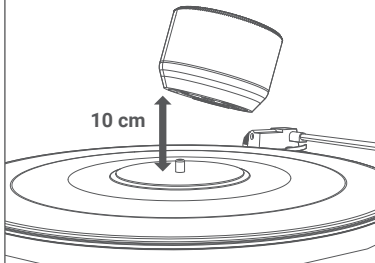


Step 6

When the turntable operates at the correct speed, the pattern on the disc will appear motionless. If the pattern seems to move slightly forward or backward, the speed is either too high or too low. Adjust the turntable speed until the pattern appears to be motionless.

****After use, long-press the right-side button to turn off the light.**

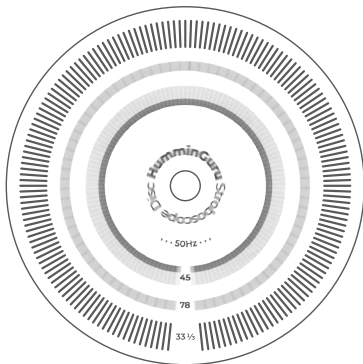


Stroboscopic Disc Reference

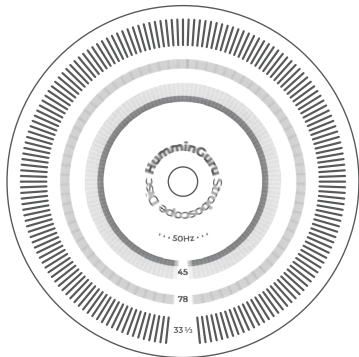

Correct RPM

The pattern will appear motionless. This indicates that the turntable is operating at optimal performance.

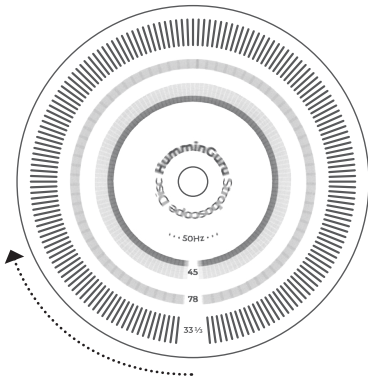


Too High

The pattern can be seen clearly, but it appears to be moving forward.




Caution:

- Do not bend or fold the disc.

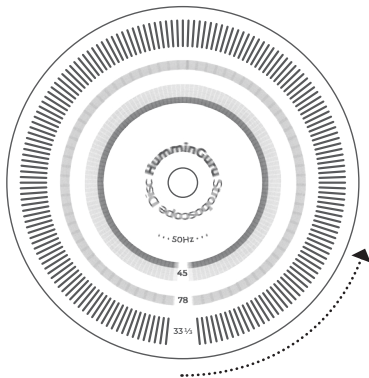

Too Low

The pattern can be seen clearly, but it appears to be moving backward.

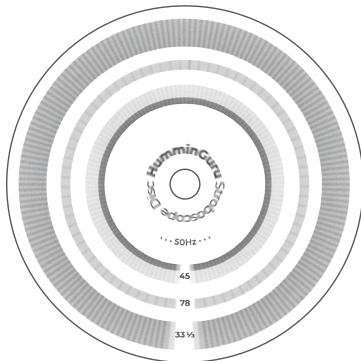

Incorrect RPM

The pattern is blurry.

Notice:

- The stroboscopic light will automatically turn off after 2 minutes of inactivity.
- Ensure the stroboscopic disc is used with a 50Hz fluorescent lamp or the HumminGuru stabilizer's built-in stroboscopic light.

Trouble Shooting

1. **All 4 charging indicator lights lit up after placing the stabilizer on the charging base.**

Check if the stabilizer is correctly placed on the charging base, aligning it with the charging pins. Otherwise, it means that the stabilizer is fully charged.

2. **The stroboscopic disc pattern does not appear correctly, despite verified speed accuracy.**

For accurate speed measurement, use only a 50Hz fluorescent lamp or the HumminGuru stabilizer's stroboscopic light. Avoid daylight, flashlights, LEDs, and 60Hz fluorescent lamps, as they may produce incorrect readings. Note that due to turntable variance and stability of power supply, the pattern may not appear perfectly motionless.

3. **The ambient light or stroboscopic light does not turn on.**

Check the battery level of the stabilizer. If the battery is fully charged and lights still do not operate, kindly contact the support team.

Specification

Product Name:	HumminGuru LUMI Record Stabilizer
Model:	HG09
Input Voltage:	5V $\overline{=}$ 1.0A via USB-C
Power:	5W
Battery Capacity:	1100mAh
Stabilizer Dimension:	ø 80 mm x 56 (H) mm
Stabilizer Weight:	300 g
Total Product Dimension:	ø 110.5 mm x 73.5 (H) mm
Total Product Weight:	384 g
Stroboscopic Disc Outer Diameter:	ø 90 mm

Limited Warranty

HumminGuru warrants this product against defects in material or workmanship for the original owner and any subsequent end user owner(s) (“You” or “Your”) for one year from the date of purchase of the product. Pursuant to this Limited Warranty, HumminGuru will, at its option, (i) repair the product using new or refurbished parts, or (ii) replace the product with a new or re-certified/refurbished product. In the event of a defect, these are your exclusive remedies. HumminGuru does not warrant that the operation of the product will be uninterrupted or error-free.

This Limited Warranty covers only the HumminGuru LUMI record stabilizer and does not cover separate accessories and technical assistance for hardware usage.

To obtain warranty service, you must contact our customer support (support@happywell.com.hk) and deliver the product, in either its original packaging or packaging affording an equal degree of protection to designated service location together with a dated purchase receipt in order to obtain warranty service. HumminGuru cannot guarantee that it will be able to repair any product under this Limited Warranty.

Repair/Replacement Warranty

This Limited Warranty shall apply to any repair, replacement part or replacement, rectified or refurbished product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer.

HumminGuru is not responsible for, and this Limited Warranty does not cover, any damage arising from a failure to operate the product within its intended uses, or otherwise follow the owner’s manual and safety instructions relating to the product’s use and installation.

HumminGuru is not responsible for any labor or parts costs you incur relating to repairs or services from providers/servicers other than from HumminGuru authorized providers/servicers. This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use. No other warranty, written or oral, is authorized by HumminGuru.

This Limited Warranty does not cover products purchased from sources other than HumminGuru or HumminGuru authorized dealer (including non-authorized online auctions), or issues due to: (i.) Outdoor exposure and other acts of nature; (ii.) Power surges; (iii.) Lack of reasonable care; (iv.) Accidental damage; (v.) Misuse or abuse; (vi.) The affixing or any attachment not provided with the product; (vii.) Damage, malfunction and/or failure to product resulting from use of parts or supplies not sold or authorized by HumminGuru; (viii.) Damage; malfunction and/or failure to product resulting from servicing not authorized or performed by HumminGuru; (ix.) Modifications of or to any of the product; (x.) Shipping damage; (xi.) Loss of part.

LIMITATION ON DAMAGES:

HUMMINGURU SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES DUE TO A DEFECTIVE PRODUCT OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

The product must be shipped postage prepaid to HumminGuru designated service location. Damage occurring during shipment is not covered by this Limited Warranty. Shipping costs are non-refundable.

Warranty Card

Model: HG09

Order #: _____

Date of Purchase (mm/dd/yy): _____

Customer Name: _____

Address: _____

For service, or questions, please contact customer support
at support@happywell.com.hk



HumminGuru



Find out more at
www.humminguru.com

Happy Well International Enterprise Limited

Rm.1202.12/F New Mandarin Plaza, Tower B,
No.14 Science Museum Road, Tsim Sha East,
Kowloon, Hong Kong
(852) 2544 2728

© 2025 Happy Well International Enterprise Limited. All Rights Reserved.

Printed in China
HG090M00010EN