

HumminGuru Water Dispenser




HumminGuru

Designed for HumminGuru Ultrasonic
Vinyl Record Cleaners (Model HG01 and HG05)

.....

Owner's Manual

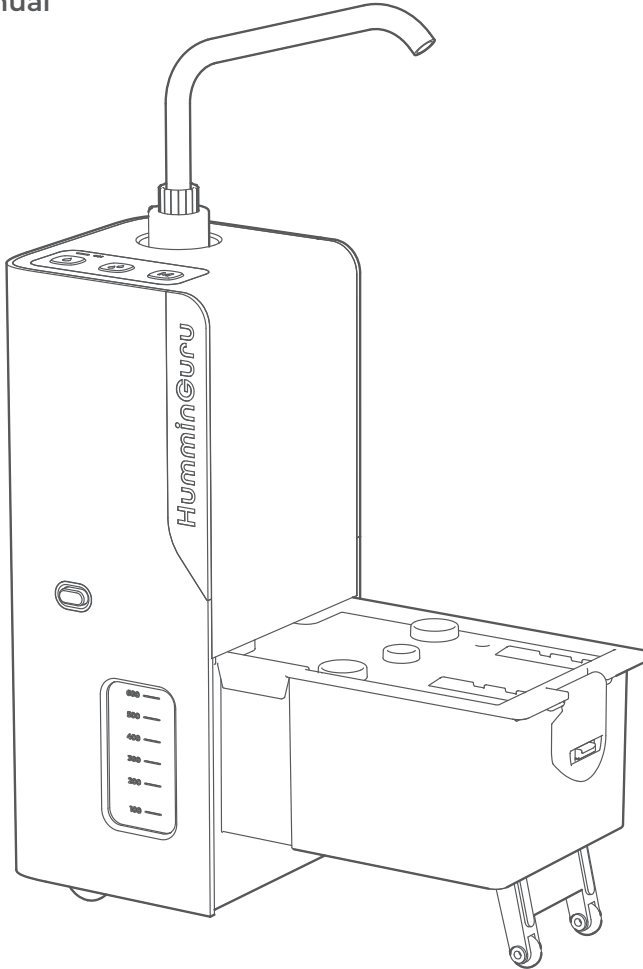

Model: HG011



Thank you for purchasing the HumminGuru water dispenser. To use this product safely and effectively, please read the manual thoroughly and ensure a clear understanding before operation. After reading, please keep the manual accessible for future reference.

Safety Precautions

Important! Read all instructions carefully before use and keep it for future reference.

HumminGuru Water Dispenser is limited to use with HumminGuru Ultrasonic Vinyl Record Cleaners (Model HG01 and HG05). This page is mainly referred to safety precautions to prevent property damage and danger to users and others. After understanding the indication and the symbols clearly, please read thoroughly and follow the instructions strictly.

Symbol Explanation

 Warning	Indicating "when the product is used wrongly, it may cause severe injuries* ¹ and death."	 Caution	Indicating "when the product is used wrongly, the user may get injured* ² or the product may cause property damage* ³ ."
--	--	---	--

*1: Severe injuries mean to get an electric shock, short circuit, and ignition.

*2: Getting injured mean you get wound and electric shock.

*3: Property damages means the damage to accommodations, properties, turntables, and other items.



Prohibited



Disassemble is prohibited



Soaking is prohibited



Wet hand is prohibited



Mandatory



Indicates prohibition (must not do). The details of the prohibition will be instructed by sentences or illustration nearby or in the symbol.



Indicates mandatory (must do). The details of the mandatory will be instructed by sentences or illustration nearby or in the symbol.



Caution: Charging



- DO NOT charge the product with a voltage that exceeds the rated specification.
- Avoid charging the product on the surface of flammable objects.
- DO NOT touch or use the product with wet hands.
- In case the product fails to charge, try using a new charging cable.
- If abnormal heat or deformation occurs during charging, immediately stop the charging process.
- If the product will not be used for an extended period, switch off the power and charge it once every three months.

 **Warning: The Device** 

This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the equipment a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.



- DO NOT disassemble, fix, repair, or modify the device in any way without the authorization of the manufacturer.



- DO NOT expose the device to water or immerse the device in water.

 **Warning: The Device** 




- DO NOT overfill the water tank.
- DO NOT leave the device unattended during operation.
- DO NOT detach the water pipe from the main body during operation.
- DO NOT remove the main body from the water tank, or remove the device from the ultrasonic cleaner during operation.
- DO NOT drop the device.

Setup


Water Pipe Installation

1. Insert the water pipe into the hole on the top of the main body.
2. Slide the water pipe lock through the pipe to hold it in place.
3. Turn the lock clockwise to fully secure the water pipe.

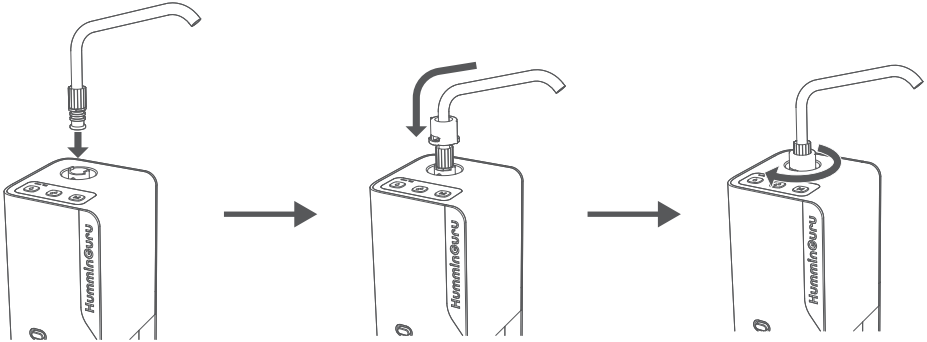

Water Tank Installation

1. Insert the water filter into the water filter slot and secure it by closing the filter cover.
2. Attach the water filter slot to the water tank lid. Turn it counter-clockwise to lock it in place.
3. Place the water tank lid securely onto the water tank.
4. Lock both sides of the lid with the water tank locks for a secure fit.

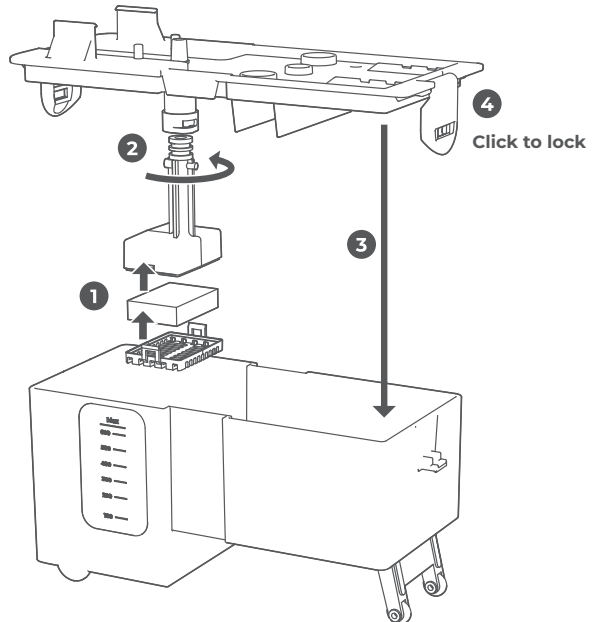


Setup

Main Body Installation

1. Hold the main body in the left hand and the water tank in the right hand.
2. Align and slide the main body vertically onto the water tank until it clicks into place.

Press and hold the release buttons on both sides simultaneously to detach the main body from the water tank.

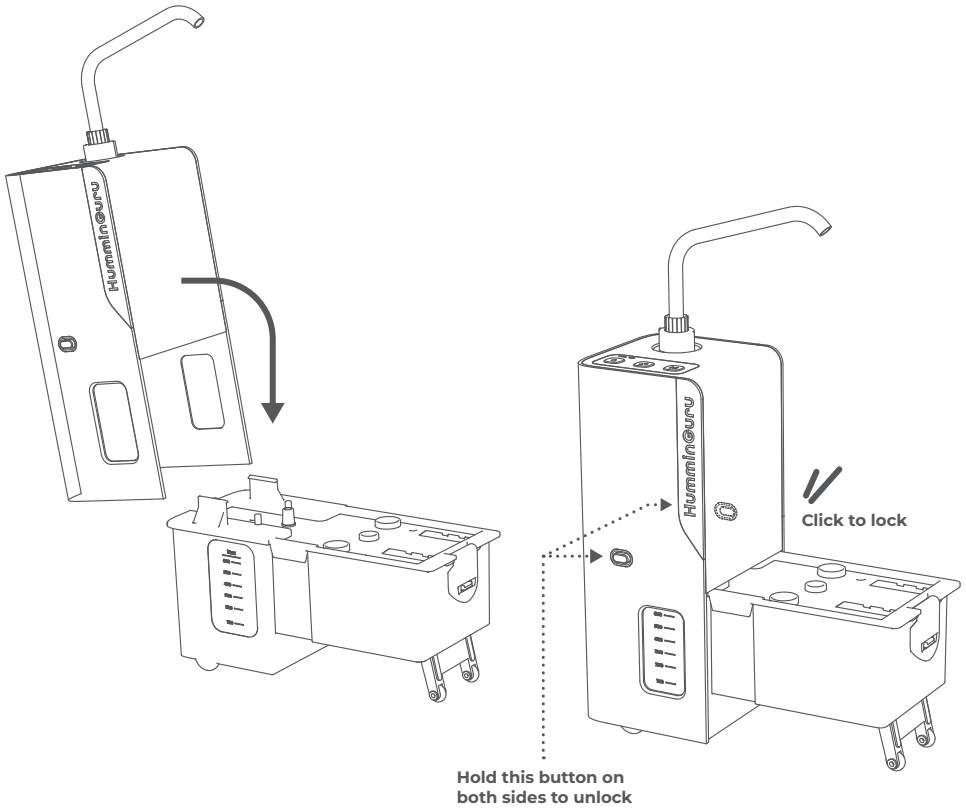


Caution

- Ensure the water tank is securely locked by verifying that the locks on both sides are in place.

Controls and Functions


Power Switch

Press the power switch to turn on the device. The control panel and water tank LEDs will illuminate, confirming it is powered on.

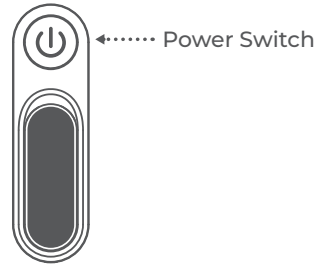

Control Panel

There are three buttons on the control panel: 350ml, 400ml, and manual buttons.

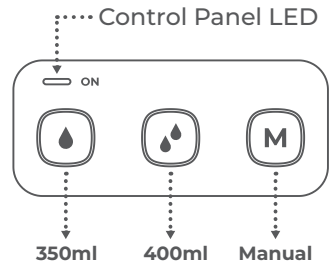

350ml Button

Press the button once to dispense a 350ml portion of water into the basin. This amount is optimized for cleaning 12" or 10" records in the HumminGuru Model HG01 and HG05. The dispenser will stop automatically once 350ml has been dispensed.



400ml Button

Press the button once to dispense a 400ml portion of water into the basin. This amount is optimized for cleaning 7" records in the HumminGuru Model HG01 and HG05. The dispenser will stop automatically once 400ml has been dispensed.



Manual Button

This button provides manual control to add water into the basin when the ☐ (350ml) or ☐ (400ml) preset amounts are insufficient. User is recommended to use HG01/HG05 maintenance tool to precisely check the water level based on the size of the record and the lead-in/out groove.

Press and hold the manual button to dispense water. Release to stop immediately.


Notice:

For ☐ and ☐ buttons, each press initiates a new dispensing cycle. To prevent overfilling, user can either completely empty the basin before starting a new cycle or select the Manual button to add water.

Charging the Device


If the device is low on battery, water dispensing functions will be disabled, and the control panel LED (white) will flash five times with any button press as an alert. Please recharge the device to resume normal operation.

To charge the device, connect the USB-C cable to the charging port on the main body **1** and plug the other end into a power outlet or charger **2**. A flashing white light will indicate that charging has begun **3**. Once fully charged, the charging indication light will stop flashing.

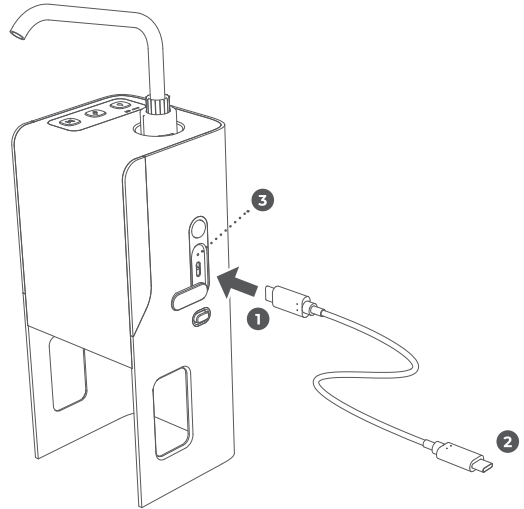

Removable Water Tank

The capacity of the water tank is 650ml.

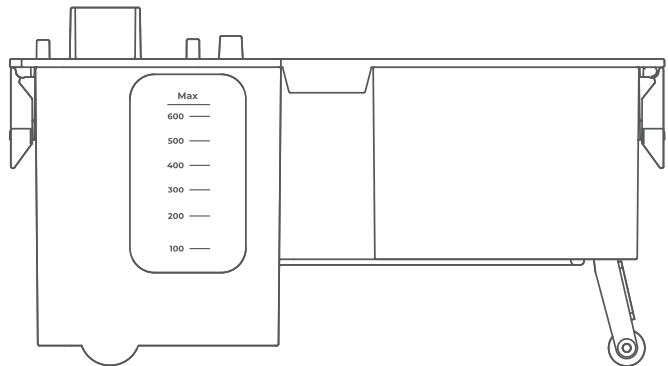


Caution

- DO NOT overfill the water tank beyond the maximum line (650ml).
- DO NOT clean the water tank in a dishwasher.

How To Use


Step 1

Fill up the water tank to the maximum water level (650ml).

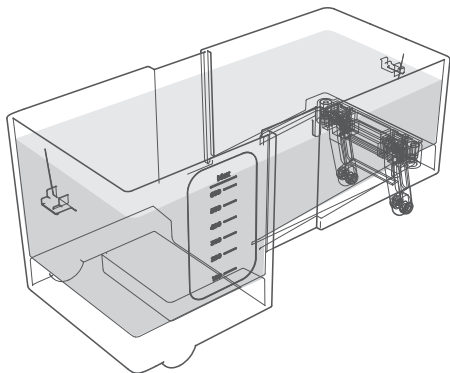


Step 2

Attach the main body to the water tank.

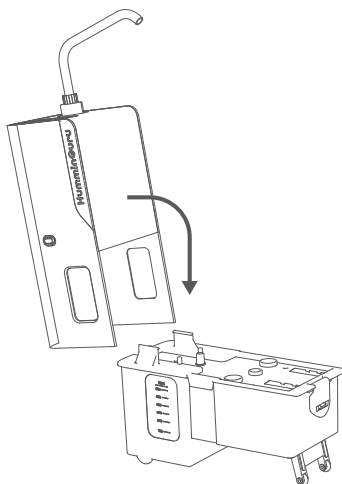

Step 3


Insert the water dispenser into the water compartment of the HumminGuru ultrasonic vinyl record cleaner (Model HG01/HG05).

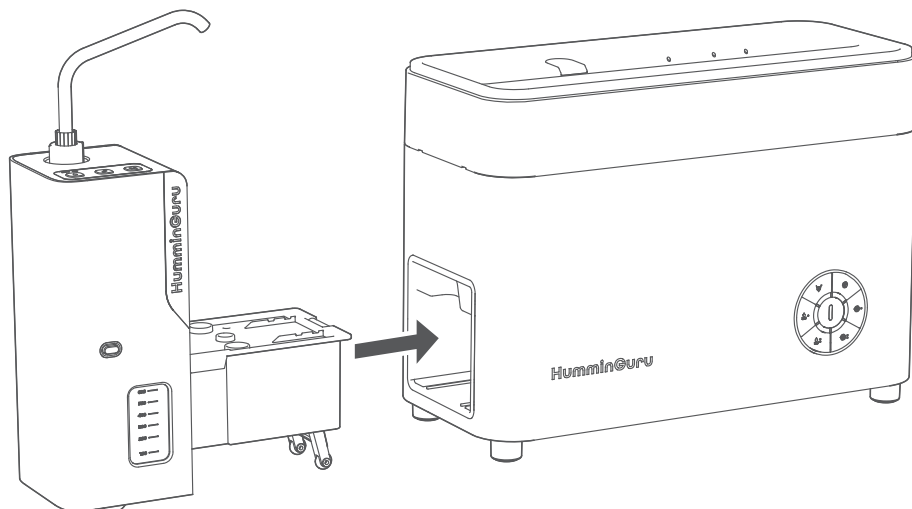

How To Use


Step 4

Turn on the power switch located at the back of the main body.

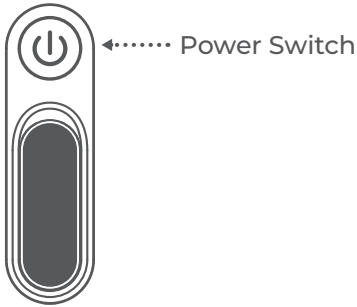


Step 5

Position the water pipe to the water basin opening.

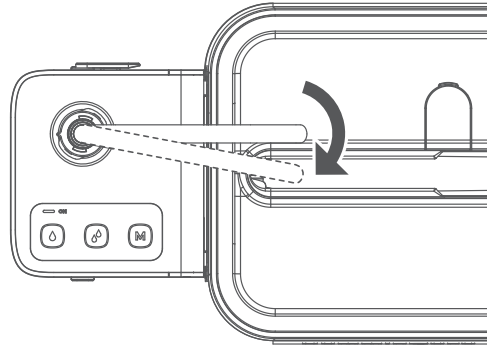

Step 6

Select the mode and press the button to dispense the water.

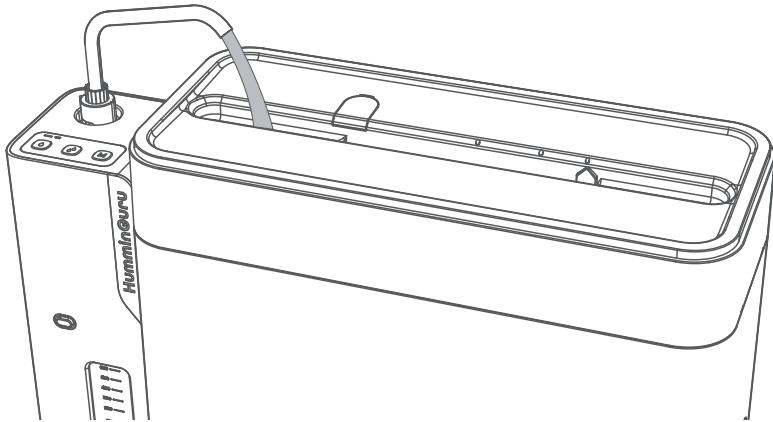

Important note:

- If a 350ml or 400ml dispensing cycle is interrupted and restarted, the machine will begin a new cycle rather than resuming the previous cycle.
- Water dispensed may vary slightly. Press the manual button to refill the basin to the level indicated by the record groove.



Caution

- DO NOT leave the device unattended during water dispensing.
- DO NOT remove the main body from the water tank during operation.

Advice & Recommendation

The HumminGuru Model HG01/HG05 can accommodate distilled, demineralized, or de-ionized water; however, if the user resides in a hard water area, it is advisable to avoid using tap water due to the potential presence of limescale and other impurities that may compromise record cleanliness and potentially leave residue in the pipes of the machine.

Highly recommend using HumminGuru “The Small Bottle”, a gentle, non-alcoholic surfactant, for optimal cleaning and drying results. Add a few drops into the water tank.


*Users should be aware of the potential risks associated with using other cleaning solutions on the machine.

Maintenance

Water Tank

Clean the tank at least once every 2 weeks, or more often if it is used frequently.

1. Empty any remaining water in the tank.
2. Wash the tank using mild soap and warm water with a soft cloth or sponge to avoid scratches. Rinse thoroughly to remove all soap residue.
3. Allow to air-dry completely before next use.

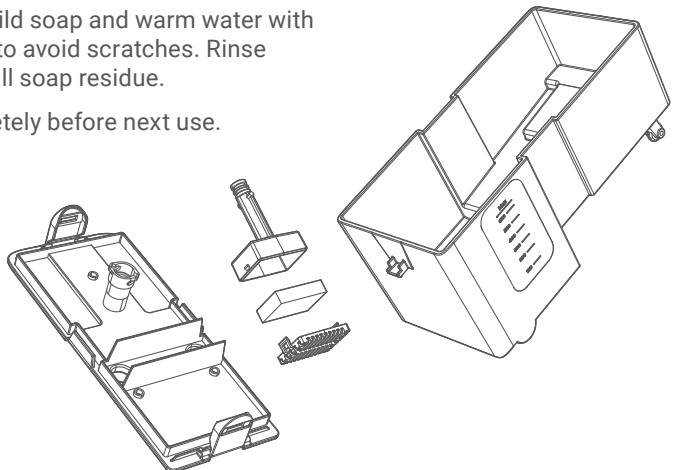

Maintenance

Water Filter

The washable and replaceable water filter filters out large residues during the cleaning cycle. Follow these steps to maintain or replace the filter:

Rinsing:


- Rinse the filter regularly under running water to remove debris.
- Air-dry the filter completely before reinstalling it.

Inspection:

- Check the filter for any signs of wear, discoloration, or damage.
- Replace the filter if it appears excessively dirty or worn.

Replacement:

- Remove the old filter from the water filter slot.
- Insert the new filter, ensuring proper alignment.
- Reattach the water filter slot securely to the water tank lid.

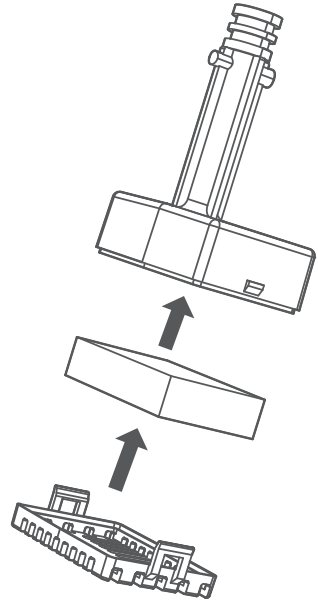

Trouble Shooting


1. The charging indicator light keep flashing.

This indicates that the battery is low and need recharging. The charging indicator light will flash 5 times with any button press, and all water dispensing functions will be disabled. Please recharge the device to resume normal operation.

2. The device is not dispensing water.

- Check the water tank to ensure there is enough water.
- Verify that the water pipe is securely installed.
- Check the battery level to see if it is running low.
- If everything above is confirmed and the issue persists, contact customer service for technical support.

Specification

Product Name:	HumminGuru Water Dispenser
Model:	HG011
Input Voltage:	5V  1.5A via USB-C
Power:	3W
Battery Capacity	4000mAh
Water Tank Capacity:	650ml
Product Dimension:	202 x 94 x 301 mm
Product Weight:	731g

Limited Warranty

HumminGuru warrants this product against defects in material or workmanship for the original owner and any subsequent end user owner(s) (“You” or “Your”) for one year from the date of purchase of the product. Pursuant to this Limited Warranty, HumminGuru will, at its option, (i) repair the product using new or refurbished parts, or (ii) replace the product with a new or re-certified/refurbished product. In the event of a defect, these are your exclusive remedies. HumminGuru does not warrant that the operation of the product will be uninterrupted or error-free.

This Limited Warranty covers only the HumminGuru Water Dispenser and does not cover separate accessories and technical assistance for hardware usage.

To obtain warranty service, you must contact our customer support (support@happywell.com.hk) and deliver the product, in either its original packaging or packaging affording an equal degree of protection to designated service location together with a dated purchase receipt in order to obtain warranty service. HumminGuru cannot guarantee that it will be able to repair any product under this Limited Warranty.

Repair/Replacement Warranty

This Limited Warranty shall apply to any repair, replacement part or replacement, rectified or refurbished product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer.

HumminGuru is not responsible for, and this Limited Warranty does not cover, any damage arising from a failure to operate the product within its intended uses, or otherwise follow the owner’s manual and safety instructions relating to the product’s use and installation.

HumminGuru is not responsible for any labor or parts costs you incur relating to repairs or services from providers/servicers other than from HumminGuru authorized providers/servicers. This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use. No other warranty, written or oral, is authorized by HumminGuru.

This Limited Warranty does not cover products purchased from sources other than HumminGuru or HumminGuru authorized dealer (including non-authorized online auctions), or issues due to: (i.) Outdoor exposure and other acts of nature; (ii.) Power surges; (iii.) Lack of reasonable care; (iv.) Accidental damage; (v.) Misuse or abuse; (vi.) The affixing or any attachment not provided with the product; (vii.) Damage, malfunction and/or failure to product resulting from use of parts or supplies not sold or authorized by HumminGuru; (viii.) Damage; malfunction and/or failure to product resulting from servicing not authorized or performed by HumminGuru; (ix.) Modifications of or to any of the product; (x.) Shipping damage; (xi.) Loss of part.

LIMITATION ON DAMAGES:

HUMMINGURU SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES DUE TO A DEFECTIVE PRODUCT OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

The product must be shipped postage prepaid to HumminGuru designated service location. Damage occurring during shipment is not covered by this Limited Warranty. Shipping costs are non-refundable.

Warranty Card

Model: HG011

Order #: _____

Date of Purchase (mm/dd/yy): _____

Customer Name: _____

Address: _____

For service, or questions, please contact customer support at support@happywell.com.hk



HumminGuru



Find out more at
www.humminguru.com

Happy Well International Enterprise Limited

Rm.1202.12/F New Mandarin Plaza, Tower B,
No.14 Science Museum Road, Tsim Sha East,
Kowloon, Hong Kong
(852) 2544 2728